# Cleaning instruction WMF presto! with Plug&Clean

Please refer to WMF presto User Manual.

**Follow the Overview of Cleaning Interval Schedule in chapter "Customer care" in the User Manual. Prior to the first cleaning, read the User Manual, Care chapter, under subheadings: "General Cleaning", "Weekly Cleaning" "Regular Cleaning" .**

### 1

✻ Touch clear pad

### 2

*Additional pads are activated.*

✻ Touch MENUE pad

### 3

✻ Touch (Care)

### 4

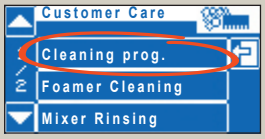


*The Submenu (Care) appears with the options.*

✻ Touch **Cleaning prog.**

### 5

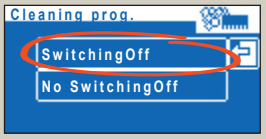


✻ Touch **Switching off**

*Select "no switching off" here, if needed.*

### 6

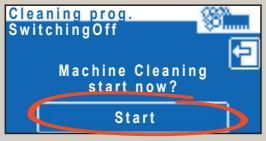


✻ Touch **Start**

*The cleaning program starts.*

### 7

✻ Pull out the cover in front of the Plug&Clean socket

### 7.1

✻ Turn the adapter in the socket by ⅛ turn, clockwise, until it stops

*The hose is now pointing straight downward.*

### 8

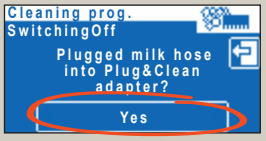


*When Step 7 is completed:*

✻ Touch **Yes**

### 9

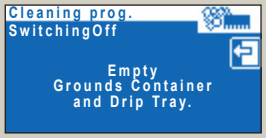


**Caution.**
If not connected to main drainage, place receptacle (3 litres) underneath.

### 10

✻ Push combi spout fully upwards

✻ Lift the adjustable screen

### 11

✻ Remove and empty grounds container

### 12

✻ Pull drip tray out and empty it

✻ Replace drip tray

**Caution.**
Without a drain connection, the drip tray must be emptied.

### 13

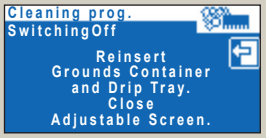


✻ Replace grounds container

✻ Lift the adjustable screen

Continue on reverse side.

**14**

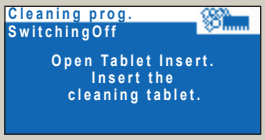


*Manual insert is either in the centre between the product containers or in the centre behind the containers.*

**14.1**

✻ Open the manual insert lid
✻ Add a special WMF cleaning tablet

**15**

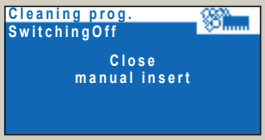


✻ Close the manual insert lid

**16**

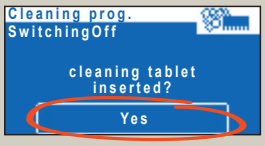


*Cleaning tablet inserted?*
✻ Touch **Yes**

**17**

*Mixer cleaning starts.*
*Duration: 30 secs.*

**18**

*Plug&Clean foamer cleaning starts.*
*Duration*
*approx. 2 minutes.*

**19**

*Machine cleaning starts.*
*Duration*
*approx. 8 - 10 minutes.*

**19.1**

**Step 7 and 8:**
Only if beverages containing milk have been previously prepared.

**Step 17:**
Only if beverages containing choc or topping components have been previously prepared with the optional mixer.

**After Plug&Clean Cleaning:** The cleaned milk hose can be stored with the adapter in the closed cooler.
**Foamer Cleaning:** Display with foamer cleaning reminder appears
**Manual combi spout cleaning with Plug&Clean:** Perform at least once per week. See below.

## Combi spout cleaning at least 1 x weekly

*Prior to cleaning, switch off at ON/OFF button. Pull out mains plug.*

### A

✻ Pull forward the lever behind the combi spout
✻ Remove combi spout
✻ Remove milk hose from milk container and release from combi spout

*If a Mixer is fitted:*
✻ Release the mixer hose

**Caution.**
Carefully disconnect the milk hose.

### B

✻ Dismantle combi spout
✻ Soak parts of combi spout together with milk hose in the cleaning solution

*If a Mixer is fitted:*
✻ Soak mixer hose in the cleaning solution

*All parts must be completely immersed.*
✻ After 5 hours clean all parts thoroughly with a brush

✻ Mix 5 ml of WMF special cleaner with 0.5 l of warm water

### C

✻ Rinse combi spout and milk hose very thoroughly with clear water so that no cleaning fluid remains

*If a Mixer is fitted:*
✻ Rinse mixer hose very thoroughly
✻ Reassemble combi spout
✻ Replace combi spout
✻ Insert milk hose

*If a Mixer is fitted:*
✻ Insert mixer hose

### Foamer Cleaning

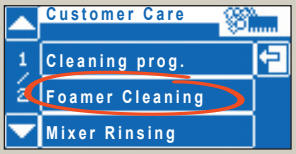


**Foamer cleaning only**
✻ On submenu (Care) touch **Foamer Cleaning**

*See steps 6 to 8 and 18.*

### Mixer Rinsing

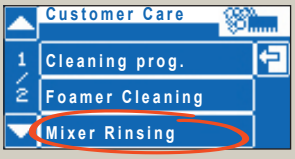


**Mixer rinsing only**
✻ On submenu (Care) touch **Mixer Rinsing**

*Mixer rinse runs for 30 secs.*